


CALIBRATION POT INSTALLATION AND OPERATING INSTRUCTIONS

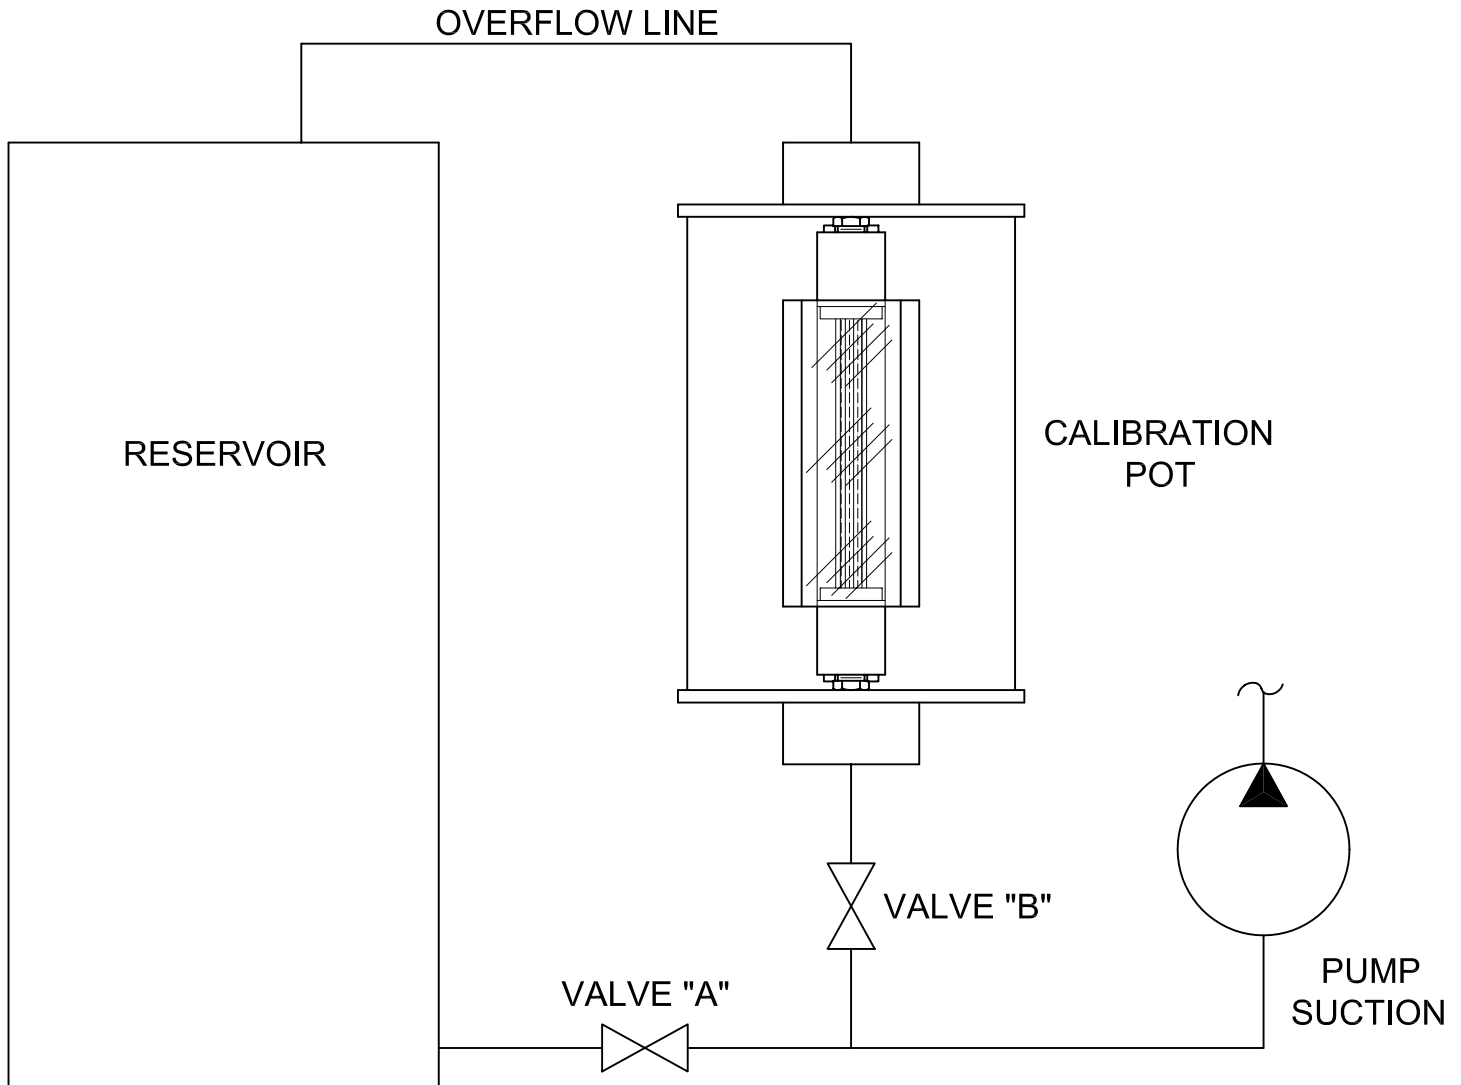

Models 15842 through 15851 are not supplied with mounting holes in their end plates. All other models are supplied with mounting holes in order to support the gauge.

GAUGE MUST BE INSTALLED SO GRAVITY WILL FILL THE GAUGE.

To check pumping rate, open VALVE "B" to fill the pump setting gauge. When the gauge is filled, close VALVE "A" for one minute, and note the level in the gauge at the beginning of the test and at the end of the test. Count the number of marks on the rate scale that the level dropped. This is the pump rate.

